

**FLUKE®**

# 820-2

## Stroboscope

## Users Manual



**敏盛企業有限公司**

<http://www.mavin.com.tw>

**免責聲明**

資料僅供參考，若有與原廠不合之處，請以原廠規格為準，且不提供任何證明文件之用

TEL:03-5970828 FAX:03-5972622 新竹湖口工業區工業四路3號2F

September 2014

© 2014 Fluke Corporation. All rights reserved. Specifications are subject to change without notice. All product names are trademarks of their respective companies.

## **LIMITED WARRANTY AND LIMITATION OF LIABILITY**

This Fluke product will be free from defects in material and workmanship for two years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
U.S.A.

Fluke Europe B.V.  
P.O. Box 1186  
5602 BD Eindhoven  
The Netherlands

# Table of Contents

Title	Page
Introduction .....	1
How to Contact Fluke.....	1
Safety .....	2
Symbols .....	3
Standard Equipment .....	4
Features .....	5
Auto Off .....	8
Low-Battery Indicator .....	8
Product Use .....	9
Default Settings .....	9
Setup Menu .....	10
Range .....	10
External Trigger .....	11
Maintenance .....	11
How to Clean the Product .....	12
How to Change the Batteries .....	12
Specifications .....	14
Mechanical Specifications .....	14
Environmental Specifications .....	14
Miscellaneous Specifications .....	16



# List of Tables

<b>Table</b>	<b>Title</b>	<b>Page</b>
1.	Symbols .....	3
2.	The Product .....	6
3.	Display .....	7

# List of Figures

<b>Figure</b>	<b>Title</b>	<b>Page</b>
1.	The Product .....	5
2.	External Trigger Connector Polarity.....	11
3.	Battery Replacement .....	13



## ***Introduction***

The 820-2 Stroboscope (the Product) uses an adjustable LED strobe light to show the movement of mechanical parts. The frequency range is 30 flashes per minute (FPM) to 300,000 FPM.

## ***How to Contact Fluke***

To contact Fluke, call one of the following telephone numbers:

- Technical Support USA: 1-800-44-FLUKE (1-800-443-5853)
- Calibration/Repair USA: 1-888-99-FLUKE (1-888-993-5853)
- Canada: 1-800-36-FLUKE (1-800-363-5853)
- Europe: +31 402-675-200
- Japan: +81-3-6714-3114
- Singapore: +65-6799-5566
- Anywhere in the world: +1-425-446-5500

Go to [www.fluke.com](http://www.fluke.com) to register your product, download manuals, and find more information.

To view, print, or download the latest manual supplement, visit <http://us.fluke.com/user/support/manuals>.

## Safety

A **Warning** identifies conditions and procedures that are dangerous to the user.

### Warning

To prevent possible personal injury:







- Read all safety information before you use the Product.
- Carefully read all instructions.
- Use the Product only as specified, or the protection supplied by the Product can be compromised.
- Do not touch the moving target object when you use the Product. In stroboscopic light, object movement can appear still or slowed.
- Do not use the Product around explosive gas, vapor, or in damp or wet environments.
- Do not use the Product around personnel that are susceptible to epileptic seizures.
- Do not use the Product if it is damaged.



## **Symbols**

Symbols used in the manual or on the Product are shown in Table 1.

**Table 1. Symbols**

<b>Symbol</b>	<b>Definition</b>
	Risk of danger. Important information. See manual.
	Battery
	Conforms to relevant Australian EMC standards.
	Conforms to European Union directives.
	Conforms to relevant South Korean EMC Standards.
	This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste. Go to Fluke's website for recycling information.

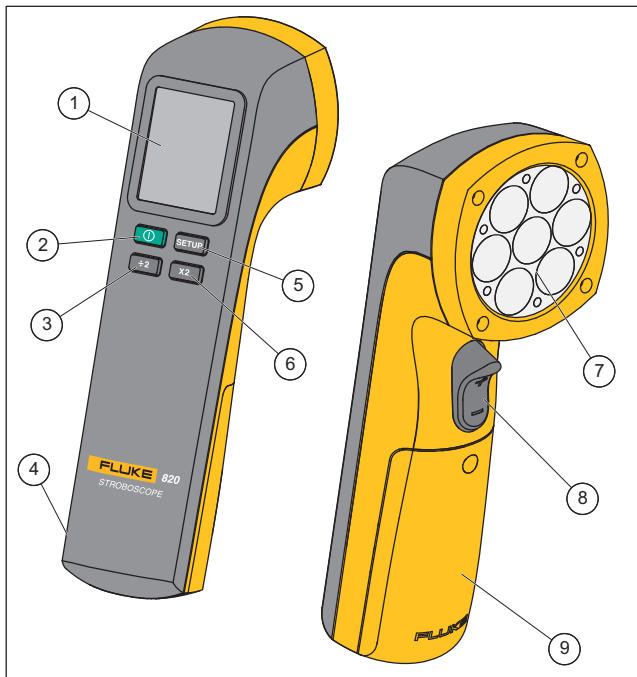
## ***Standard Equipment***

If an item below is missing or damaged, contact Fluke. The Product comes with:

- Quick Reference Guide
- Safety Information
- International Registration Card
- Statement of Quality
- Hard Case
- AA Batteries (3)
- External Trigger Input Connector

## Features










Figure 1, Table 2, and Table 3 show the Product.



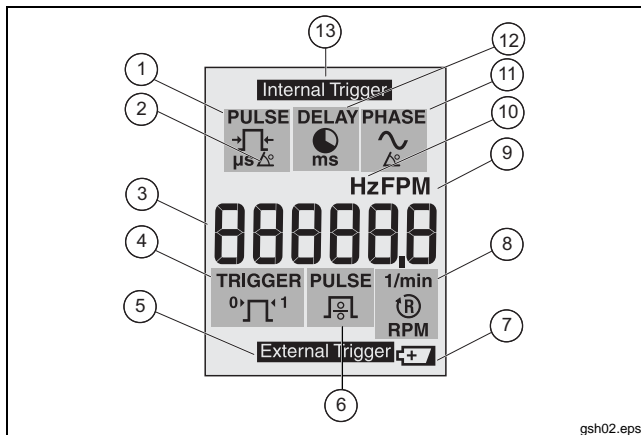
gsh01.eps

**Figure 1. The Product**

Table 2. The Product

Item	Description
①	Display
②	<b>Power Button-</b> Push  to turn on the Product. Push and hold  for 2 seconds to turn off the Product.
③	Push  to divide the current set value by two. The scroll speed increases when  is continuously held down.
④	External trigger connection
⑤	<b>Setup-</b> Push  to move between different settings and modes.
⑥	Push  to double the current set value. Speed of the scroll increases when this button is held down.
⑦	LED strobe
⑧	Push the trigger (  ) up to increase the current set value. Push  down to decrease the current set value. Speed increases when  is held down.
⑨	Battery compartment

**Table 3. Display**



Item	Description
①	Adjustable pulse width in microseconds ( $\mu s$ ). Adjustment is accessed in the Setup Menu.
②	Adjustable pulse width in degrees. Adjustment is accessed in the Setup Menu.
③	Primary display. Six digits with decimal.
④	Set external trigger edge to 0 for positive and 1 for negative. Adjustment is accessed in the Setup Menu.
⑤	External trigger input is connected.
⑥	Set the external trigger pulse divider from 1 to 255. Adjustment is accessed in the Setup Menu.


**Table 3. Display (cont.)**

Item	Description	Item	Description
⑦	Low battery. Replace the battery.	⑧	1/min or RPM for external trigger input.
⑨	Flashes per minute (FPM), default at power up.	⑩	Flashes per second. Adjustment is accessed in the Setup Menu.
⑪	Pulse delay in degrees (Phase degree). Adjustment is accessed in the Setup Menu.	⑫	Pulse delay in milliseconds (ms). Adjustment is accessed in the Setup Menu.
⑬	Internal trigger		

**Auto Off**



To conserve battery power, the Product turns off after 15 minutes of non-use.

**Low-Battery Indicator**



The low-battery indicator is shown when the battery is low. When the low-battery indicator shows () , change the batteries.

## **Product Use**

The subsequent sections tell you how to use the Product.

Push  to turn on the Product. Push and hold  for 2 seconds to turn off the Product.

## **Default Settings**

To set the Product to the default settings, push and hold  and .

The default settings are:

- 1000 FPM
- 16.7 Hz
- 333 Pulse  $\mu$ s
- 2.0 Pulse deg
- 0 Delay ms
- 0 Phase deg
- External pulse divider = 1
- External trigger edge = 0 (positive)

## Setup Menu

When you push **SETUP**, the display shows the Setup menu. From the Setup menu, you can change these parameters:

- **Hz** setting – Adjust the flashes per seconds in Hz.
- Pulse width in  $\mu\text{s}$  ( $\mu\text{s}$ ) – Adjust the flash intensity in microseconds of pulse width.
- Pulse width in degrees ( $\mu\text{s}$ ) – Adjust the flash intensity in degrees of flash rate.
- Delay in ms ( $\text{ms}$ ) – Adjust the delay time in milliseconds between internal trigger and flash. Precise adjustments of the observation position can be made with this setting.
- Phase degree ( $\text{deg}$ ) – Adjust the degrees of phase shift between internal trigger and flash. Precise adjustments of the observation position can be made with this setting.
- External trigger pulse divider ( $\text{DIV}$ ) – Set the external trigger divider, to adjust the flash rate.
- External trigger edge ( $0/1$ ) – Set the external trigger edge to either positive (0) or negative (1).

Push  **$\div 2$** ,  **$\times 2$** , and  **$\frac{1}{2}$**  to make adjustments to each parameter.

Push **SETUP** to change parameters and to enter and exit the Setup menu.

## Range

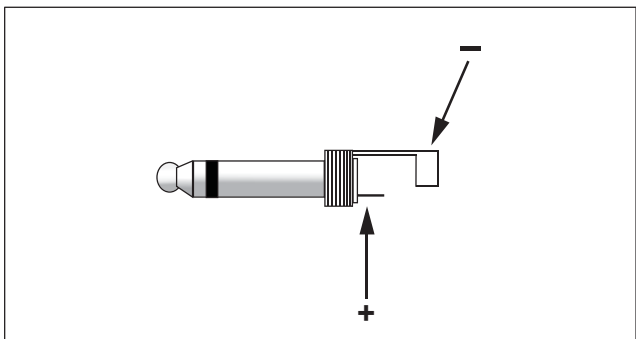
When the external trigger is  $>5$  kHz, **-OL-** shows on the display.

When the external trigger is  $<0.5$  Hz, **-UL-** shows on the display.



## **External Trigger**

Use the External Trigger Input Connector for outside trigger sources. When the Connector is plugged into the Product (see Figure 1, item ④) the Product displays **External Trigger**. Table 3 shows what options are available when an external trigger is used. For Connector polarity information, see Figure 2.



gsh04.eps

**Figure 2. External Trigger Connector Polarity**

## **Maintenance**

### **⚠ Caution**

The Product contains no user-serviceable parts. To prevent damage to the Product, do not open the case. For service, see “How to Contact Fluke”.


### ***How to Clean the Product***

Regularly clean the case with a damp cloth and mild detergent.

#### **Caution**

**To prevent damage to the Product, do not use abrasives or solvents to clean the Product case.**

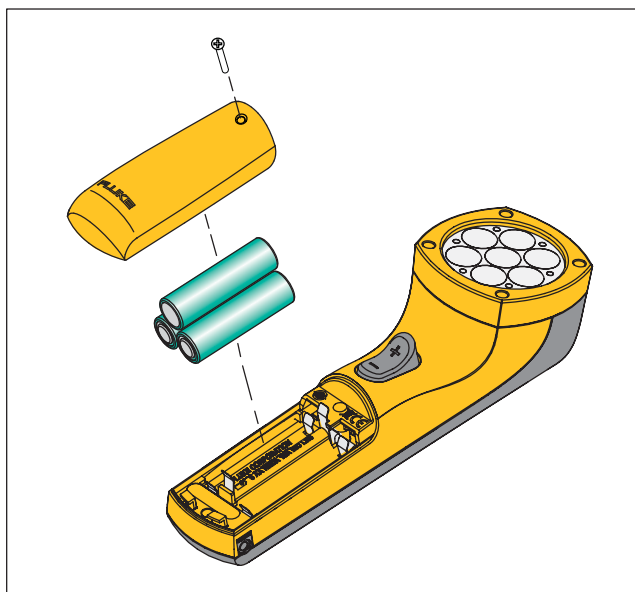
### ***How to Change the Batteries***

The Product is energized by three AA (LR6) batteries. When the low battery symbol shows on the display () , replace the batteries. See Figure 3.

#### **Caution**

**To prevent damage to the Product:**

- **Be sure that the battery polarity is correct to prevent battery leakage.**
- **Remove batteries to prevent battery leakage and damage to the Product if it is not used for an extended period.**



gsh03.eps

**Figure 3. Battery Replacement**

## **Specifications**

### **Mechanical Specifications**

Size (H x W x L) .....5.71 cm x 6.09 cm x 19.05 cm  
(2.25 in x 2.4 in x 7.5 in)

Weight.....0.24 kg (0.53 lb)

### **Environmental Specifications**

Operating Temperature.....0 °C to +45 °C (+32 °F to +113 °F)

Storage Temperature.....-10 °C to +50 °C (+14 °F to +122 °F)

Operating Humidity .....Non-condensing, < +50 °F (< +10 °C)

90 %RH, +10 °C to +30 °C  
(+50 °F to +86 °F)

75 %RH, +30 °C to +40 °C  
(+86 °F to +104 °F)

45 %RH, +40 °C to +50 °C  
(+104 °F to +122 °F)

(Without Condensation)

Absorption/Corrosion.....+30 °C (+86 °F), 95 %RH, 5 days

Product functions normally

Operating Altitude .....2,000 m

Storage Altitude ..... 12,000 m

Vibration.....MIL-PRF-28800F Class 2

Safety ..... IEC 61010-1:Pollution Degree 2

Electromagnetic

Environment ..... IEC 61326-1:Industrial

*Group 1 ISM equipment:* group 1 contains all ISM equipment in which there is intentionally generated and/or used conductively coupled radio-frequency energy which is necessary for the internal functioning of the equipment itself.

*Class A equipment* is suitable for use in non-domestic locations and/or directly connected to a low-voltage power supply network. Class A equipment may have potential difficulties in ensuring electromagnetic compatibility in other environments, due to conducted as well as radiated disturbances.

Electromagnetic

Compatibility ..... Applies to use in Korea only.

Class A Equipment (Industrial  
Broadcasting & Communication  
Equipment) <sup>[1]</sup>

- [1] This product meets requirements for industrial (Class A) electromagnetic wave equipment and the seller or user should take notice of it. This Equipment is intended for use in business environments and is not to be used in homes.

## Miscellaneous Specifications

Battery Type.....3 x AA Alkaline LR6

Flash Frequency

Range .....30 FPM to 300,000 FPM

0.5 Hz to 5000 Hz

Accuracy .....0.02 %

Resolution .....30 FPM to 999 FPM = 0.1

1000 FPM to 300,000 FPM = 1

0.5 Hz to 999 Hz = 0.1

1000 Hz to 5000 Hz = 1

Frequency Setting .....FPM or Hz

Flash Pulse

Duration .....Adjustable in  $\mu$ s or degrees

Delay .....Adjustable in ms or degrees

Light

Color .....Approx. 6500 K

Emission Output .....4800 lx @ 6000 FPM

30 cm (11.9 in) at 3°

External Trigger

Method .....Connector to externally control trigger

Frequency Range .....0.5 Hz to 5000 Hz

High Level .....3 V to 32 V

Low Level .....<1 V

Minimum Pulse Width ...50  $\mu$ s Connection



敏盛企業有限公司

<http://www.mavin.com.tw>

免責聲明

資料僅供參考，若有與原廠不合之處，請以原廠規格為準，且不供任何證明文件之用

TEL:03-5970828 FAX:03-5972622 新竹湖口工業區工業四路3號2F